



How to change reversed camera input

Version 1.01 – May 2022

Context

Depending on the camera settings, sometimes the video input from the camera can appear reversed, meaning it may be difficult to read the text a presenter may showing via the camera input.

Solution

1. Point the camera remote towards the camera and push the "menu" button
2. Select the "video" menu on the screen and change the "image mode" from "stand" to "mirror", as indicated in the image below.

