

# RAPIDMOOC GO/STUDIO/PRO Installing the new Application

V1.0.2 - February 2021

## Index

Uninstall the previous software	3
Windows Configuration	3
Setting	3
Screen	3
Screen #1	3
Screen #2 (on port #4 of the Atem)	3
Enabling the developer mode	4
Video sources Configuration	4
Active video sources	4
Software Installation	5
Blackmagic Atem Mini software	5
Team Viewer	6
Rapidmooc Application	6
Automatic start of the Rapidmooc Application	6
Magewell USB Capture Utility	7


## Uninstall the previous software

- 1. From the file explorer, go to c:/programmes/inwicast et click on the following link : unistall.exe (or uninstall00.exe).
- 2. Open Windows parameters, go to Applications and uninstall the Soft Vision.
- 3. Restart the studio

Ideally, it would be great at this stage to shut down the studio and remove the Datapath card, the one with the 2 HDMI plugs side by side (but be careful not to mistake it with the NVIDIA graphic card)

## Windows Configuration

Open the Windows parameters panel from the Windows menu

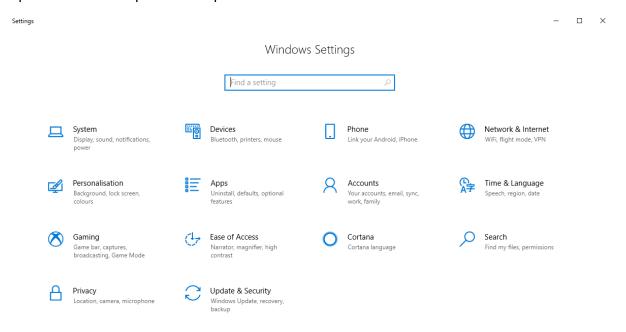

## Setting

Go to System > Display and apply the following parameters:

#### Screen

Go to System > Display

#### Screen #1


1920x1080 resolution, zoom 100%, Tick the box « Make this my main display »

#### Screen #2 (on port #4 of the Atem)

1920x1080 resolution, zoom 100%

## Enabling the developer mode

Go to update and security > For Developers

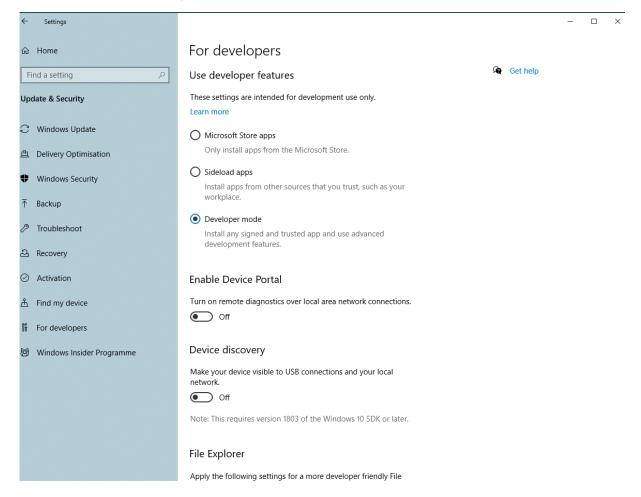

## Video sources Configuration

### Active video sources

The Rapidmooc studio new configuration uses 3 HDMI to USB capture boxes to receive the video sources :

Box	Usage
Blackmagic Design	Video and audio sources for the webmeeting applications
	and the live streaming (Atem program output)
USB Capture HMDI+	Video and audio sources for the studio recordings (Atem
	program output)
USB Capture HDMI	Video source for collecting the displayed presentation
	(Laptop enrty)


## Software Installation

## Blackmagic Atem Mini software


8.2.3 version or later

https://www.blackmagicdesign.com/support/family/atem-live-production-switchers

Once on the page, go to the column Latest Downloads and download the <u>Windows version</u> of ATEM Switchers 8.2.3 Update dated 10 June 2020.

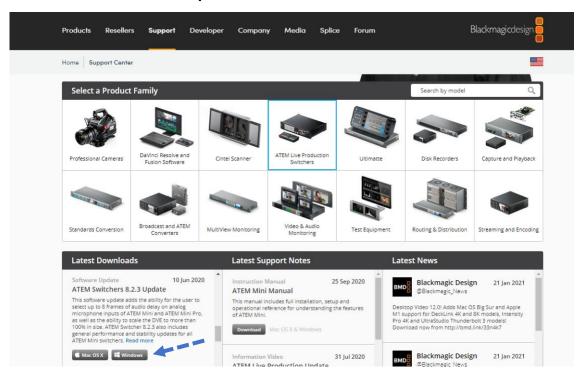

On the following screen, do not fill in the form and click on Download Only

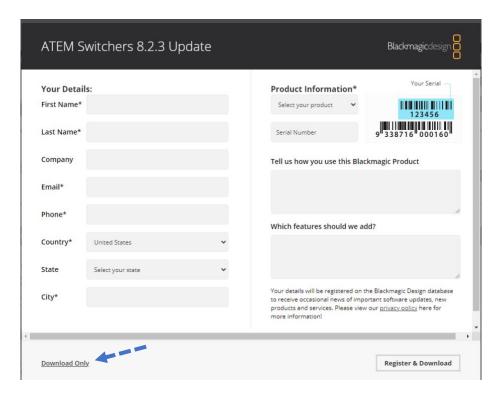

#### **Team Viewer**


Download the latest version from teamviewer.com

## Rapidmooc Application

Download from the link below

#### https://rapidmooc.com/support/updates old/

Unzip the file and then go to the following directory

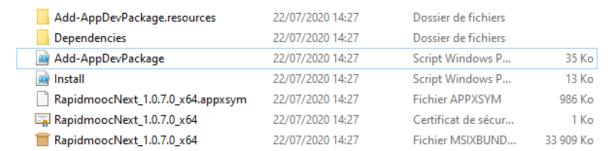

Right click snd choose « Execute with Powershell » in the contectual menu. Follow the onscreen instructions

Once installed, the Rapidmooc application can be accessed from the Windows menu

## Automatic start of the Rapidmooc Application

First you need to get a \*.lnk shortcut to the app. This can be done by pinning the app to the Start Menu as a tile and then dragging and dropping the tile to a folder or to the Desktop. This will create a shortcut that can launch the app.

To run the app automatically after boot, you can just put it into the Startup folder: press Win+R and type shell:startup. Everything in this folder is automatically opened after boot. You can just drag and drop your \*.lnk file in this folder and reboot to see how it works.

From https://stackoverflow.com/questions/40003160/universal-windows-app-auto-startup

## Magewell USB Capture Utility

Download from the link below

http://www.magewell.com/files/tools/USBCaptureUtility3\_for\_Windows\_4202.zip